



## Throttle Side:

- (1) Carefully remove your current grip making sure to leave the plastic throttle sleeve in place.
- ② Trim the ribs from your throttle sleeve. The throttle sleeve should be smooth when finished. (Fig. 1)

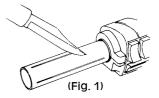


- (3) Apply glue to the throttle sleeve. Most of the glue should be applied to the end of the sleeve away from the throttle housing.
- (4) Slide the grip onto throttle sleeve with one strong push (Fig. 2). NOTE: Be sure not to get any glue into the space between the throttle sleeve and the throttle sleeve housing, as well as the space between the throttle sleeve and the handle bar. Wipe up any excess glue immediately. Allow 6 hours for glue to set before using.

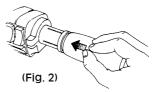

## **Clutch Side:**

- Remove clutch side grip by carefully cutting it away from the handlebar with a sharp knife.
- ② Apply glue to the bar. Most of the glue should be applied to the end of the bar away from the switch housing.
- (3) Slide the grip onto the bar with one strong push. Wipe away any excess glue immediately. Allow 6 hours for glue to set before using. (Fig. 3)

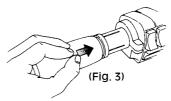

**Note:** Before applying glue make sure the surface is clean, dry and free of oil. Install grips immediately after glue has been applied.



2180 Elmwood Ave. Buffalo, NY 14216 800-445-8946 www.coolsac.com