




Grips Installation for 08' Harley Davidson Touring models with an electronic throttle

CLUTCH SIDE

1. Remove existing clutch side grip by carefully cutting it away from the handlebar with a sharp knife. (Fig. 1)

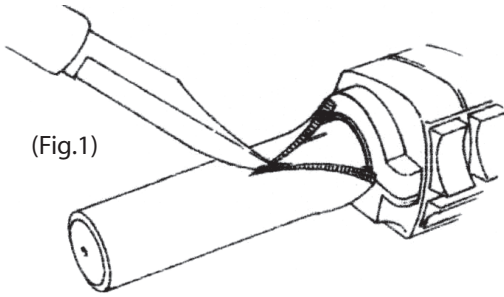


(Fig.1)

Tip: Warm grip with sunlight or a hairdryer to soften the rubber, making it easier to push the grips on.

2. Apply glue to the bar. Most of the glue should be applied to the end of the bar away from the switch housing.

3. Slide the grip on the bar with one strong push (Fig. 2) wipe up any excess glue immediately. Allow glue 6 hours to set before using.


4. Put grip on 1-2" then line up with throttle side.

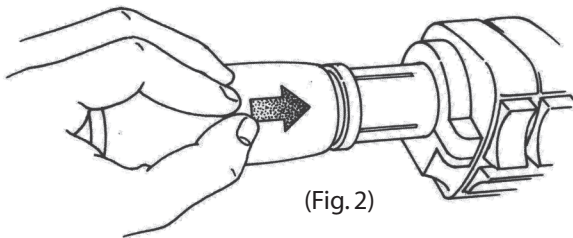

(Fig.2)

THROTTLE SIDE

1. Using a sharp knife, remove the rubber from your current grip by carefully cutting it away from the existing plastic throttle sleeve. The rubber that is adhered to the plastic sleeve must be "shaved" resulting in a smooth plastic sleeve with no rubber. (Fig. 3)

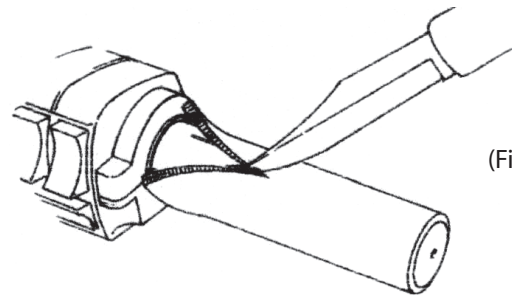


(Fig.3)

2. Apply glue to the throttle sleeve. Use about 1/4 of the tube of glue on each side. Most of the glue should be applied to the end of the sleeve away from the throttle housing.

3. Slide the grip on to the throttle sleeve with one strong push. Use a rubber mallet if needed. Be sure not to get any of the glue into the space between the throttle sleeve and the throttle housing as well as the space between the throttle sleeve and the handlebar. (Fig. 4)

*Wipe up any excess glue immediately

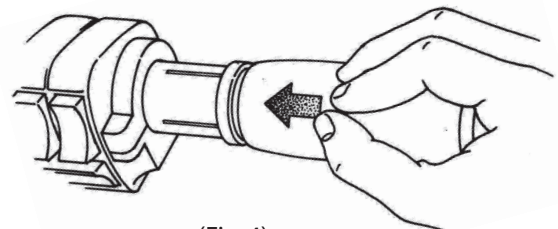

(Fig.4)